





MULTITESTERY NN INSTALACÍ METREL - stručný přehled funkcí



									
		MI 3105 (EU) Eurotest XA	MI 3101 Eurotest AT	MI 3102H BT Eurotest XE	MI 3102 BT Eurotest XE	MI 3100 SE Eurotest EASI	MI 3100 S Eurotest EASI	MI 3125 B Eurotest COMBO	MI 3125 Eurotest COMBO
Automatické sekvence	Auto TT (U, Z _{LN} , Z _S , U _C)	✓	✓	✓	✓	✓	✗	✗	✗
	Auto TN/RCD (U, Z _{ln} , Z _s , R _{pe})	✓	✓	✓	✓	✓	✗	✗	✗
	Auto TN (U, Z _{ln} , Z _{lp} , R _{pe})	✓	✓	✓	✓	✓	✗	✗	✗
	Auto IT (U, Z _i , I _s , I _m)	✗	✗	✗	✓	✗	✗	✗	✗
Napětí	TRMS napětí, frekvence, sled fází	✓	✓	✓	✓	✓	✓	✓	✓
Izolační odpor	Měřicí napětí 50 ~ 1000 V	✓	✓	✓	✓	✓	✓	✓	✓
	Měřicí napětí 2500 V	✗	✗	✓	✗	✗	✗	✗	✗
	Automatické měření L-PE, N-PE, L-N	✓	✓	✓	✗	✗	✗	✗	✗
Spojitosť	Měřicí proud 200 mA a 7 mA	✓	✓	✓	✓	✓	✓	✓	pouze 200 mA
RPE	RPE / RPE RCD	✗	✗	✓	✓	✓	✗	✗	✗
Z _{LINE} - impedance sítě	Z _{LINE} , zkrat. proud, databáze pojistek	✓	✓	✓	✓	✓	✓	✓	✗
Z _{LOOP} - impedance smyčky	Z _{LOOP} , zkrat. proud, dat. pojistek Z _s (RCD)	✓	✓	✓	✓	✓	✓	✓	✗
RCD	Vypínací čas a proud, U _c , auto test	AC / A / B / F / B+	AC / A / B / F / B+	AC / A / F	AC / A / F / B / B+	AC / A / F	AC / A / F	AC / A / B	AC / A
	PRCD	✗	✗	✗	✓	✗	✗	✗	✗
Zemní odpor	3-vodičová metoda	✓	✓	✓	✓	✓	✓	✓	✗
	2 x kleště	✓	✗	✓	✓	✗	✗	✗	✗
	Měrný odpor půdy	opt.	opt.	opt.	opt.	✗	✗	✗	✗
Další funkce	Výkon (W, VA, Var, PF, THD)	✗	✗	✓	✓	✗	✗	✗	✗
	Harmonické	✗	✗	✓	✓	✗	✗	✗	✗
	Měření proudu	✓	✓	✓	✓	✗	✗	✗	✗
	IMD, ISFL	✓	✓	✗	✓	✗	✗	✗	✗
	Ovladače	✓	✓	✓	✓	✓	✗	opt.	opt.
	Měření osvětlení (typ B, C)	opt.	✗	opt.	opt.	✗	✗	✗	✗
	Bluetooth vestavěný	✗	✗	✓	✓	✗	✗	✓	✗
	Bluetooth externí (dongle)	✓	✓	✗	✗	✓	✗	✓	✗
Software	Rozhraní RS-232, USB	✓	✓	✓	✓	✓	✗	✓	✗
	EuroLink	✓	✓	✓	✓	✓	✗	✓	✗
		EuroLink PRO Plus	opt.	opt.	opt.	opt.	✗	opt.	✗